

Accessories Interfaces

Type	Order No.
<p>CR1</p>  <p>Converter for BC615 readers</p> <p>CR1 is required when a BC615, BC615-EM or BC615-Cotag is connected to a SiPass Entro segment controller. It converts between RS232 and RS485.</p> <p>Dimensions (W x H x D) 120 x 80 x 40 mm</p>	S24246-C3651-A1
<p>IF1</p>  <p>SiPass Entro interface box with cable</p> <p>IF1 is an interface box that enables the easy connection of a PC (or printer) to a SiPass Entro segment controller. It is supplied with a 15-meter-long cable (not shown).</p> <p>Dimensions (W x H x D) 85 x 85 x 63 mm</p>	S24246-Z8352-A1
<p>USB-RIF/2</p>  <p>Interface for enrolment reader</p> <p>The USB-RIF/2 supports the Clock&Data and Wiegand 26-bit interfaces for connecting readers. It is delivered with a one-meter-long USB cable.</p> <p>It can be used in either SiPass Entro or SiPass integrated for:</p> <ul style="list-style-type: none"> • Easy enrolment of cards and tags into the system • Fast search for cardholder/person <p>In SiPass Entro it can also be used as a login reader to support authentication via card/tag to the software.</p> <p>Please also see the TG-EM USB and TG-Cotag USB reader kits (SiPass Entro core software section), which include a PR500 reader and a desk stand as well as a USB-RIF/2 interface.</p> <p>Dimensions (W x H x D) 140 x 66 x 28 mm</p>	S24246-F8655-A1
<p>Tamper Kit</p>  <p>Tamper kit for DC22, SR34i, SR35i and ACC-Lite</p> <p>This tamper kit can be used with the DC22, SR34i, SR35i and ACC-Lite. It triggers a tamper alarm in the system if the controller is removed from the wall.</p> <p>Quantity in order: 10</p>	S54513-S3-A1